
# Maestro Pneumatic Faucet Foot Pedal

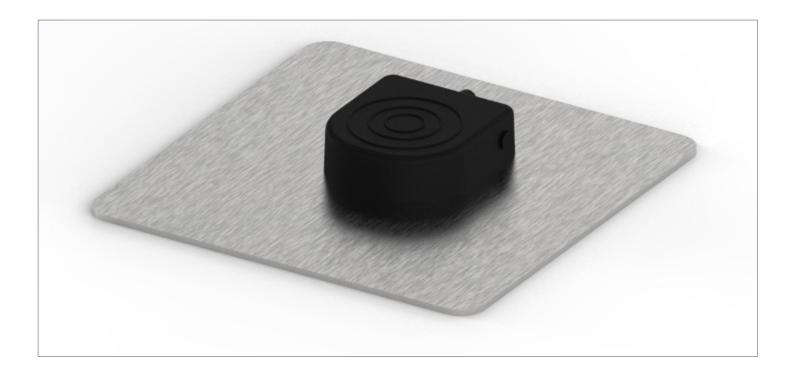

#### **SPECIFICATIONS**

## Construction

- Designed to control the On/Off function for the sink on a Maestro or Maestro Encore grossing station
- Includes pneumatic food pedal, hose, water solenoid, and coil

### Performance

- · Controls the On/Off function of the unit's sink
- Use pedal to turn on faucet, and press again to turn facuet off, unless water timer is set for automatic shut off

# Compatibility

 Compatible with all Maestro and Maestro Encore grossing stations

