


Morgue Refrigerator (4 Body), Telescoping End Opening, Transfer Options - KA1400

End opening telescoping morgue refrigerators are designed with individual door openings. A telescoping mechanism fully supports the body tray. When the door is open and the end of the telescoping mechanism is fully extended, the tray is in full head-to-toe view. The cadaver can be removed alone or with the body tray.

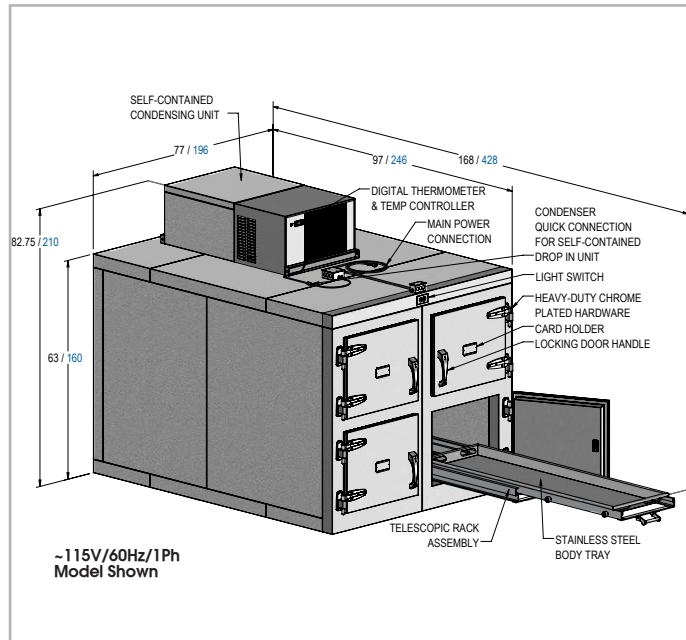

SPECIFICATIONS

Construction

- Front: Stainless steel with a no. 4 finish
- Top, sides, back, interior: Stucco embossed aluminum
- Interior flooring: Smooth aluminum with plywood reinforced understructure
- Insulation: 4" foamed in place urethane
- (4) Three-piece telescopic fabricated of extruded aluminum with nylon rollers
- Overlap door with magnetic gasket

Materials

- Stainless steel and stucco embossed aluminum exterior
- Heavy-duty chrome-plated hardware for long lasting use
- Stainless steel removable trays

Dimensions

- Overall: 77" W x 97" D x 83" H
- Doors: 27" W x 22" H

Utilities / Power

- 115V / 60Hz / 1 Ph
- 208-230V / 50-60Hz / 1 Ph available (may affect dimensions & features)

Controls

- Vapor proof light with switch

Performance

- Drop-in self-contained refrigeration system with digital thermometer and easy to adjust temperature controller
- Operating Temperature: 38°F / 3.3°C

Installation

- Unit ships knocked down and will require assembly

Options & Accessories

- Custom sizes for larger cases
- Full length interior roller racks
- HD plastic storage boards



www.mopec.com

800.362.8491

800 Tech Row

Madison Heights, MI 48071