


Economy Transport Lift | JD4000

Safely transporting and handling cadavers is paramount to maintaining staff safety. Our racks, body trays, carrier pallet systems, and lifts all work together seamlessly to provide a safe, convenient experience. Mopec's JD4000 Economy Transport Lift is lighter, shorter, and more maneuverable than the larger Red Wing series lifts, providing an affordable option while maintaining the Mopec Quality you have come to know and expect.

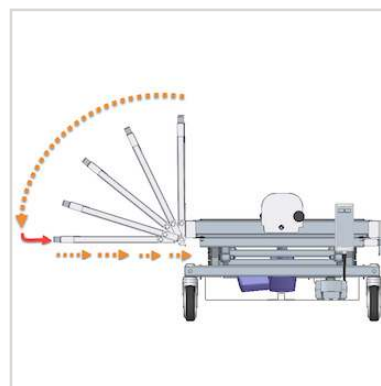

SPECIFICATIONS

Construction

- Lightly polished stainless steel construction
- Dual scissor operation
- Four locking swivel casters with steering functionality in one

Dimensions

- 80.9" L x 30.3" W
- Approximately 340 lbs
- Elevation range of 14.8" - 59.6"

Controls

- Hand-held pendant for elevation control
- Emergency OFF switch

Power

- 24 volt DC linear actuator, control and battery
- 110V AC charger

Performance

- Roller top
- Electric actuator operation
- End loading and side loading
- Easily converts between end loading and side loading in 30 seconds
- Weight capacity of 450 lbs
- Integrated collapsible rails for cart cover
- Cart cover included for discrete transporting

Compatibility

- Roller top accommodates 23", 27", and 30" body trays
- Compatible with all Mopec 3-tier storage and mortuary racks

Options & Accessories

- JZ014 Replacement Cadaver Cover



www.mopec.com

800.362.8491

800 Tech Row

Madison Heights, MI 48071