


Hydraulic Roller Cadaver Carrier, Various Sizes

Mopec's Hydraulic Roller Cadaver Carriers are heavy-duty mortuary transport carts built for body trays. Its dual foot-pedal hydraulic system raises and lowers the carrier smoothly during loading/unloading. Four large 8" casters with total-lock and tray stop latch ensure stable, secure movement and transfer. The wide platform supports up to 375 lb and is sized for standard mortuary hallways and doors.



JA630

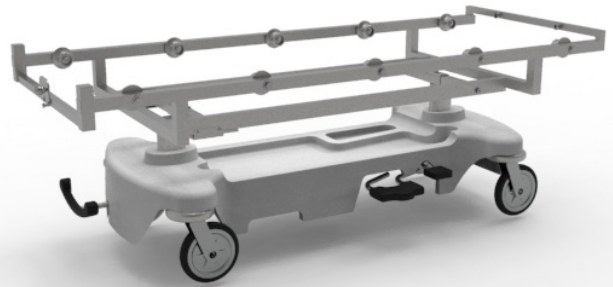

JA631

SPECIFICATIONS

Construction

- Raise or lower the cart using the dual sided mounted foot controls
- Enable fifth wheel steering, neutral, or full brakes with foot controls
- (4) heavy duty 8" casters
- Tray stop latch
- (10) Nylon rollers to allow for smooth movement of trays on the carrier

Capacity

- 375 lbs

Materials

- 11ga 1.5" SQ 304 stainless tubing construction with a 180-grit finish
- Roller top for trays with nylon rollers
- Hydraulic Stryker base

Dimensions

- JA630: 79.2" L X 27.25" W X 27.8" to 40.55" H
- JA631: 79.1" L X 31.3" W X 27.8" to 40.55" H

Compatibility

- JC630: JC023 & JC023D trays
JA611 (Cadaver False Frame)
JZ013 (White Vinyl Cover)
- JA631: JC027 & JC027D trays
JA612 (Cadaver False Frame)
JZ029 (Black Vinyl Cover)
- Note: All compatible items sold separately.

Note:

- Trays sold separately

Variations

Model No.	Description	Dimensions
JA630	Hydraulic Roller Cadaver Carrier for 23" Trays	79.2" L X 27.25" W X 27.8" to 40.55" H
JA631	Hydraulic Roller Cadaver Carrier for 27" Trays	79.1" L X 31.3" W X 27.8" to 40.55" H

MOPEC
GROUP

mopec
ELEVATING PATHOLOGY

MORTECH
MANUFACTURING

www.mopecgroup.com

800.362.8491

800 Tech Row, Madison Heights, MI