
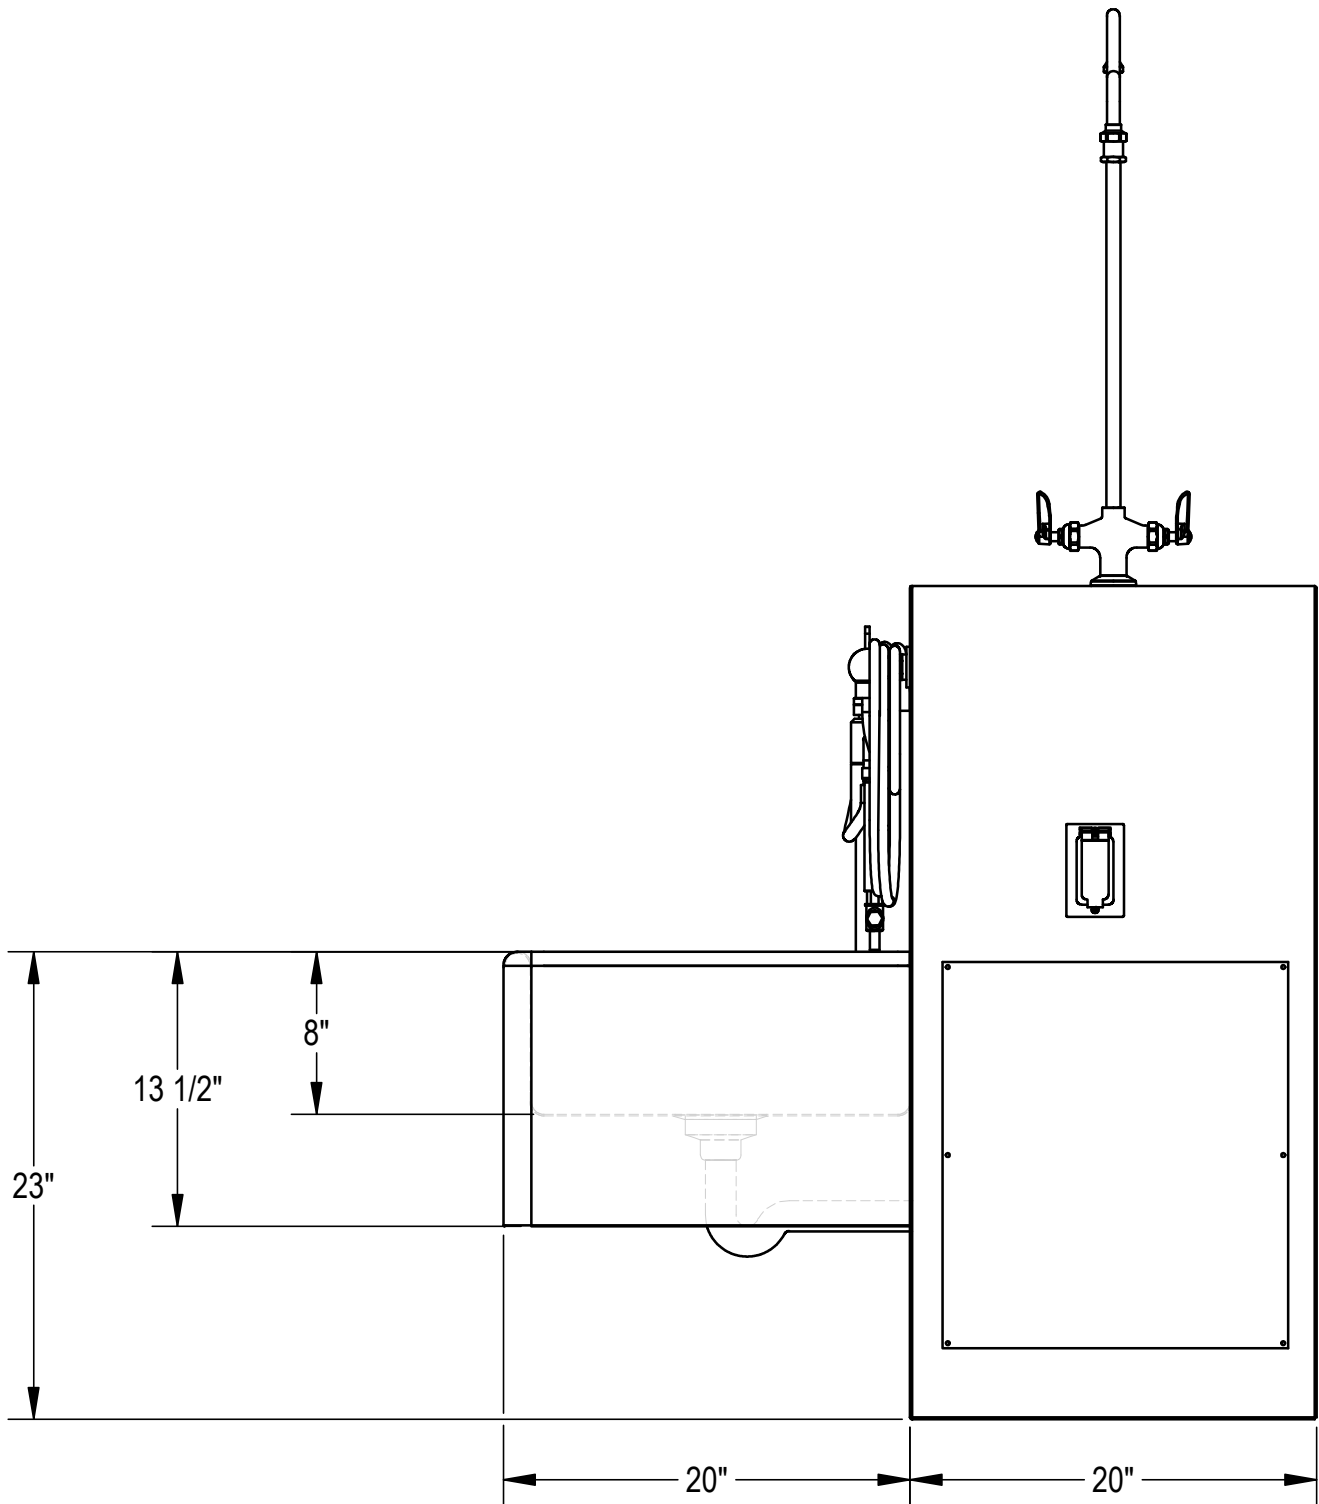
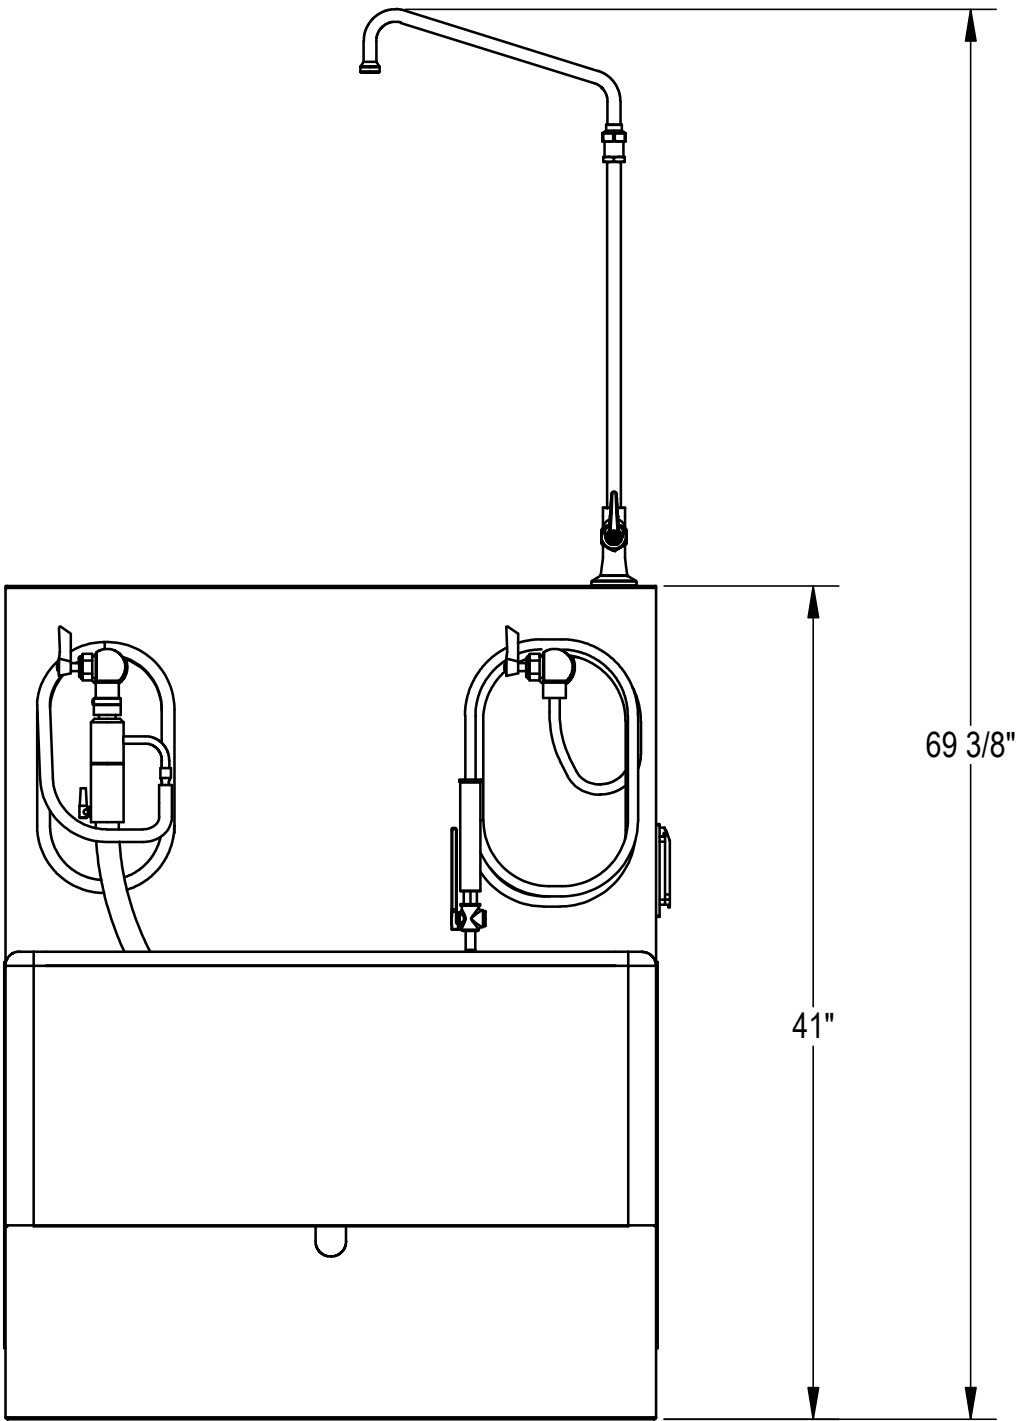
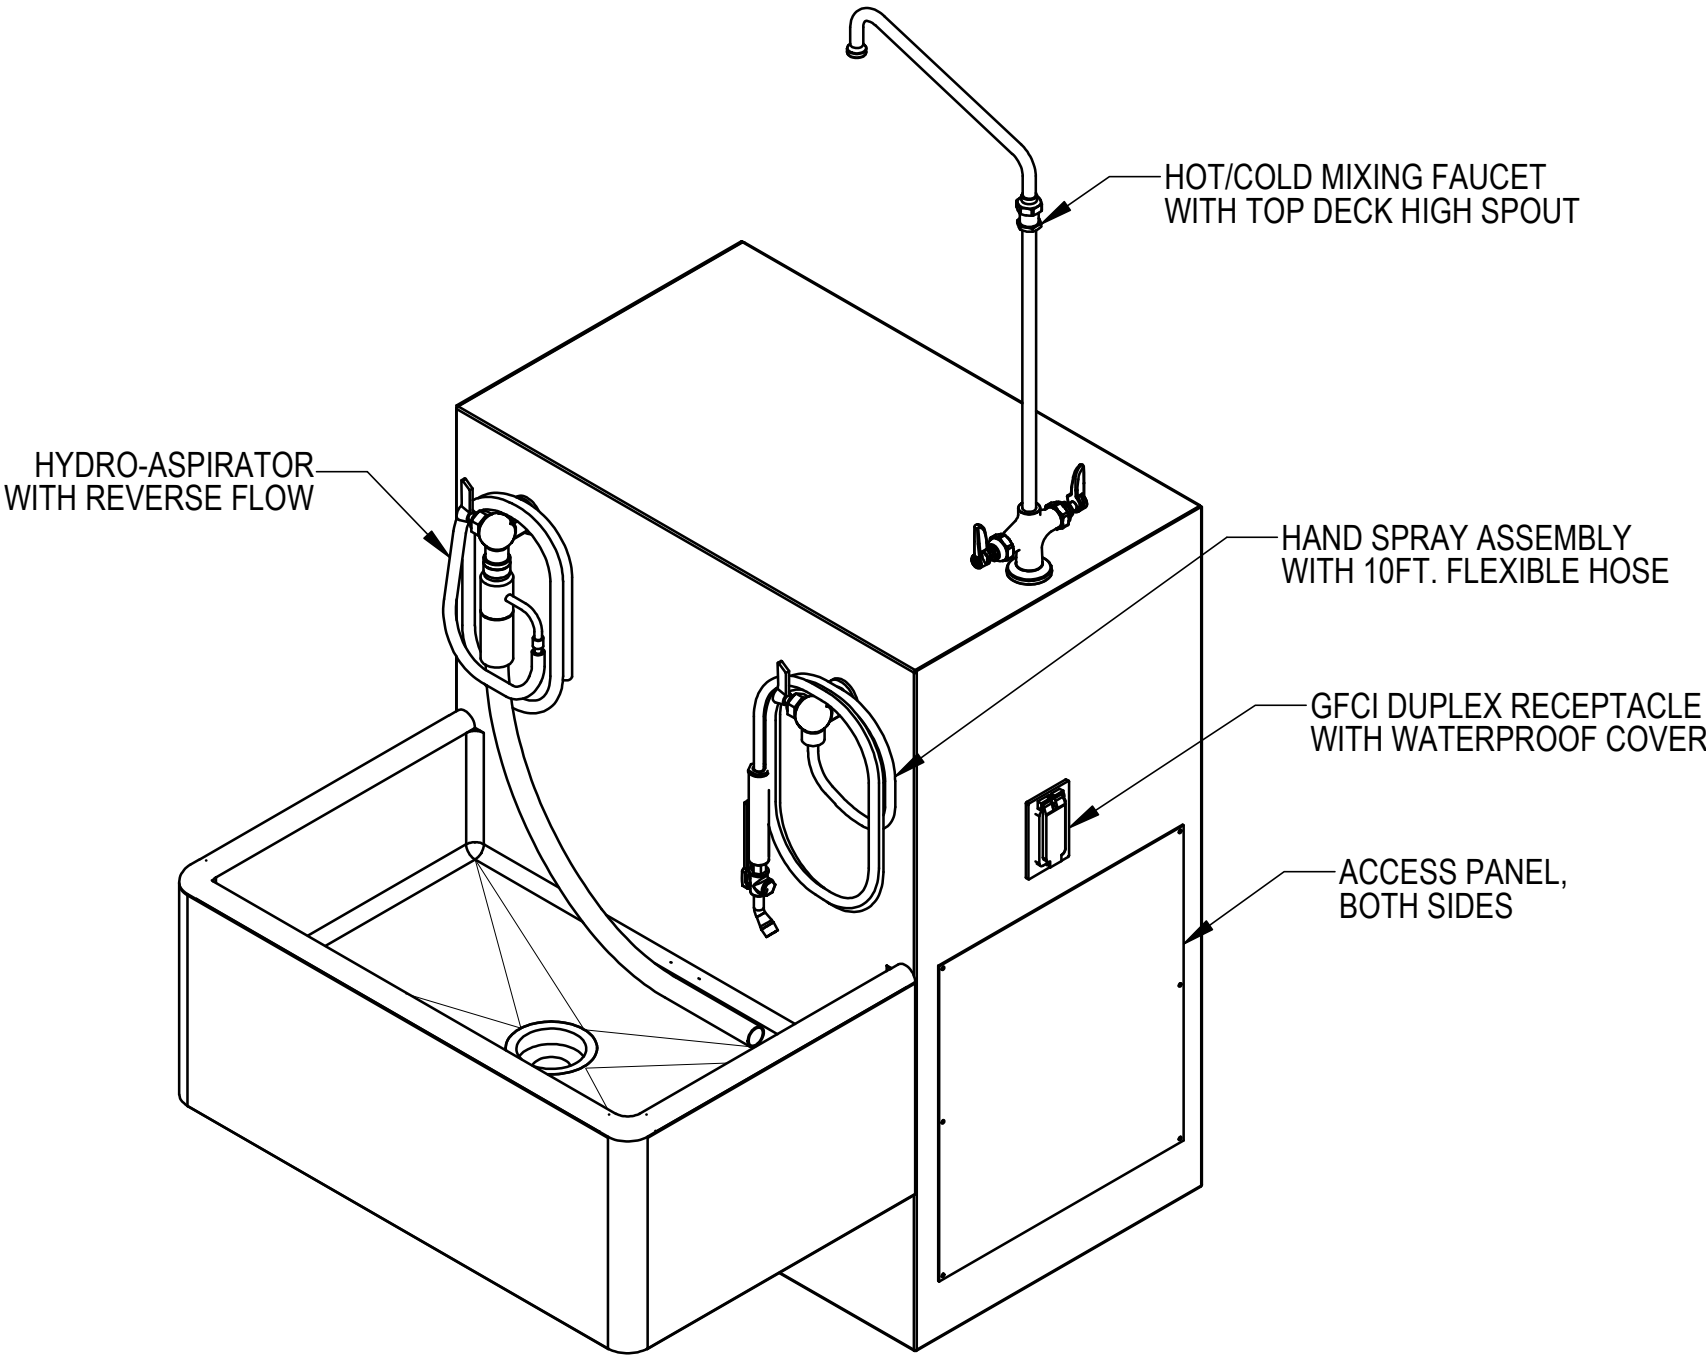


NOTES: UNLESS OTHERWISE SPECIFIED


1. APPLICABLE TO STANDARDS AND SPECIFICATIONS;
ANSI Y14.5M, DIMENSIONS AND TOLERANCES
ANSI Y1.1, ABBREVIATIONS

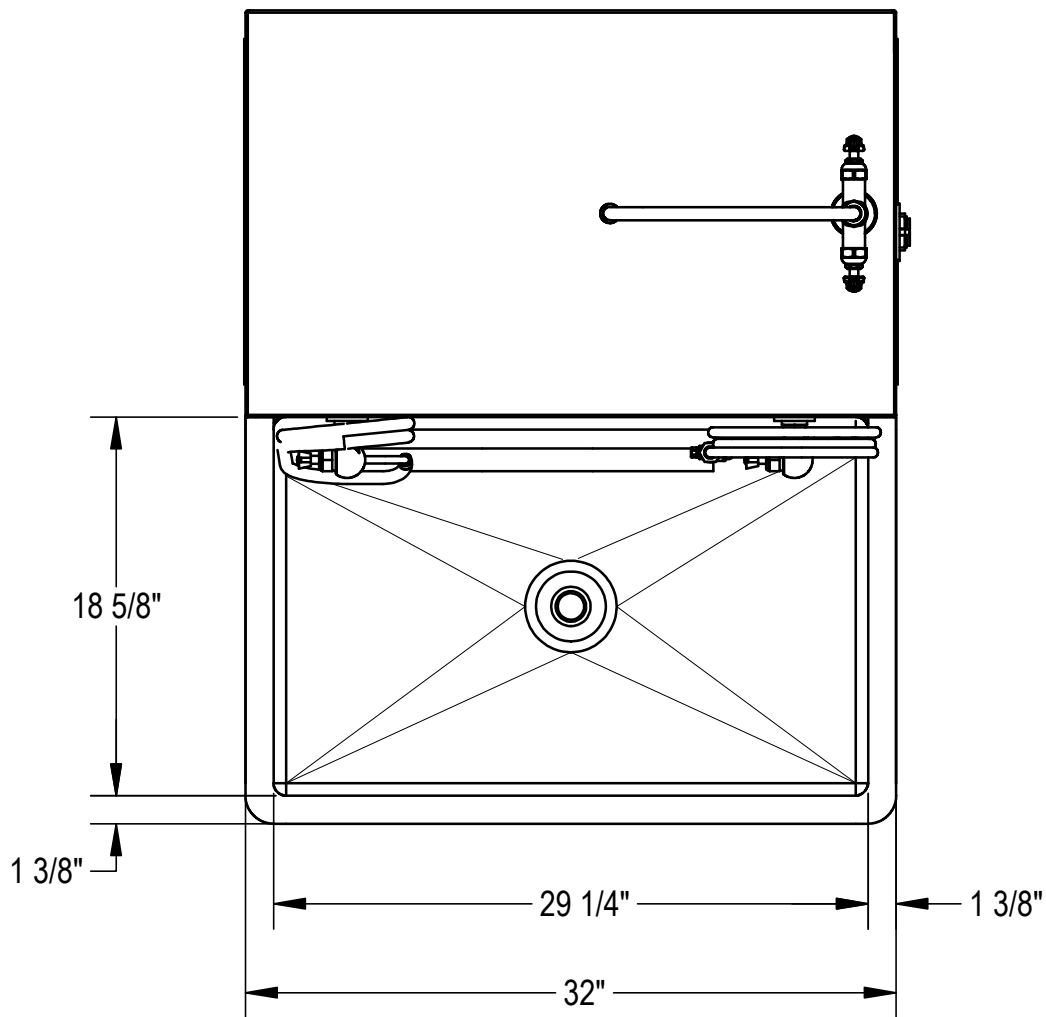

CUSTOMER		APPROVAL		PROPRIETARY THIS DOCUMENT AND THE DATE DISCLOSED HEREIN AND HERewith IS NOT TO BE REPRODUCED, USED, OR OTHERWISE DISCLOSED IN WHOLE OR IN PART TO ANYONE WITHOUT WRITTEN AUTHORIZATION FROM MORTECH MFG.					411 North Aerojet Avenue Azusa, CA 91702 tel: (800) 410-0100 (626) 334-1471 fax: (626) 334-1704 www.mortechmfg.com		
PROJECT		SIGNATURE					DATE		TITLE		MODEL 1036-9
						DO NOT SCALE DRAWING		APPROVALS		DATE	
						MATERIAL		DRAWN BY		02/25/14	
						304 STAINLESS STEEL		ELISEO S.			
						CHECKED BY					
						FINISH		APPROVED BY			
						#4 SATIN					
						SCALE		1:10		NEXT ASSY.	
						SHEET		1		OF 3	
						DWG NO.		10369AP		REV X02	

UTILITY REQUIREMENT NOTES:

1. FLUSH LINES CLEAR BEFORE CONNECTING TO STATION.
2. PLUMBER TO PROVIDE SHUT-OFF VALVES FOR WATER CONNECTIONS.
3. PROVIDE 60-65 PSI WATER PRESSURE AND 4 GALLONS PER MINUTE OF FLOW FOR PROPER OPERATION OF HYDRO-ASPIRATOR.
4. ELECTRICIAN TO PROVIDE LIQUID TIGHT JUNCTION BOX AND CONDUIT CONNECTIONS PER LOCAL CODES.

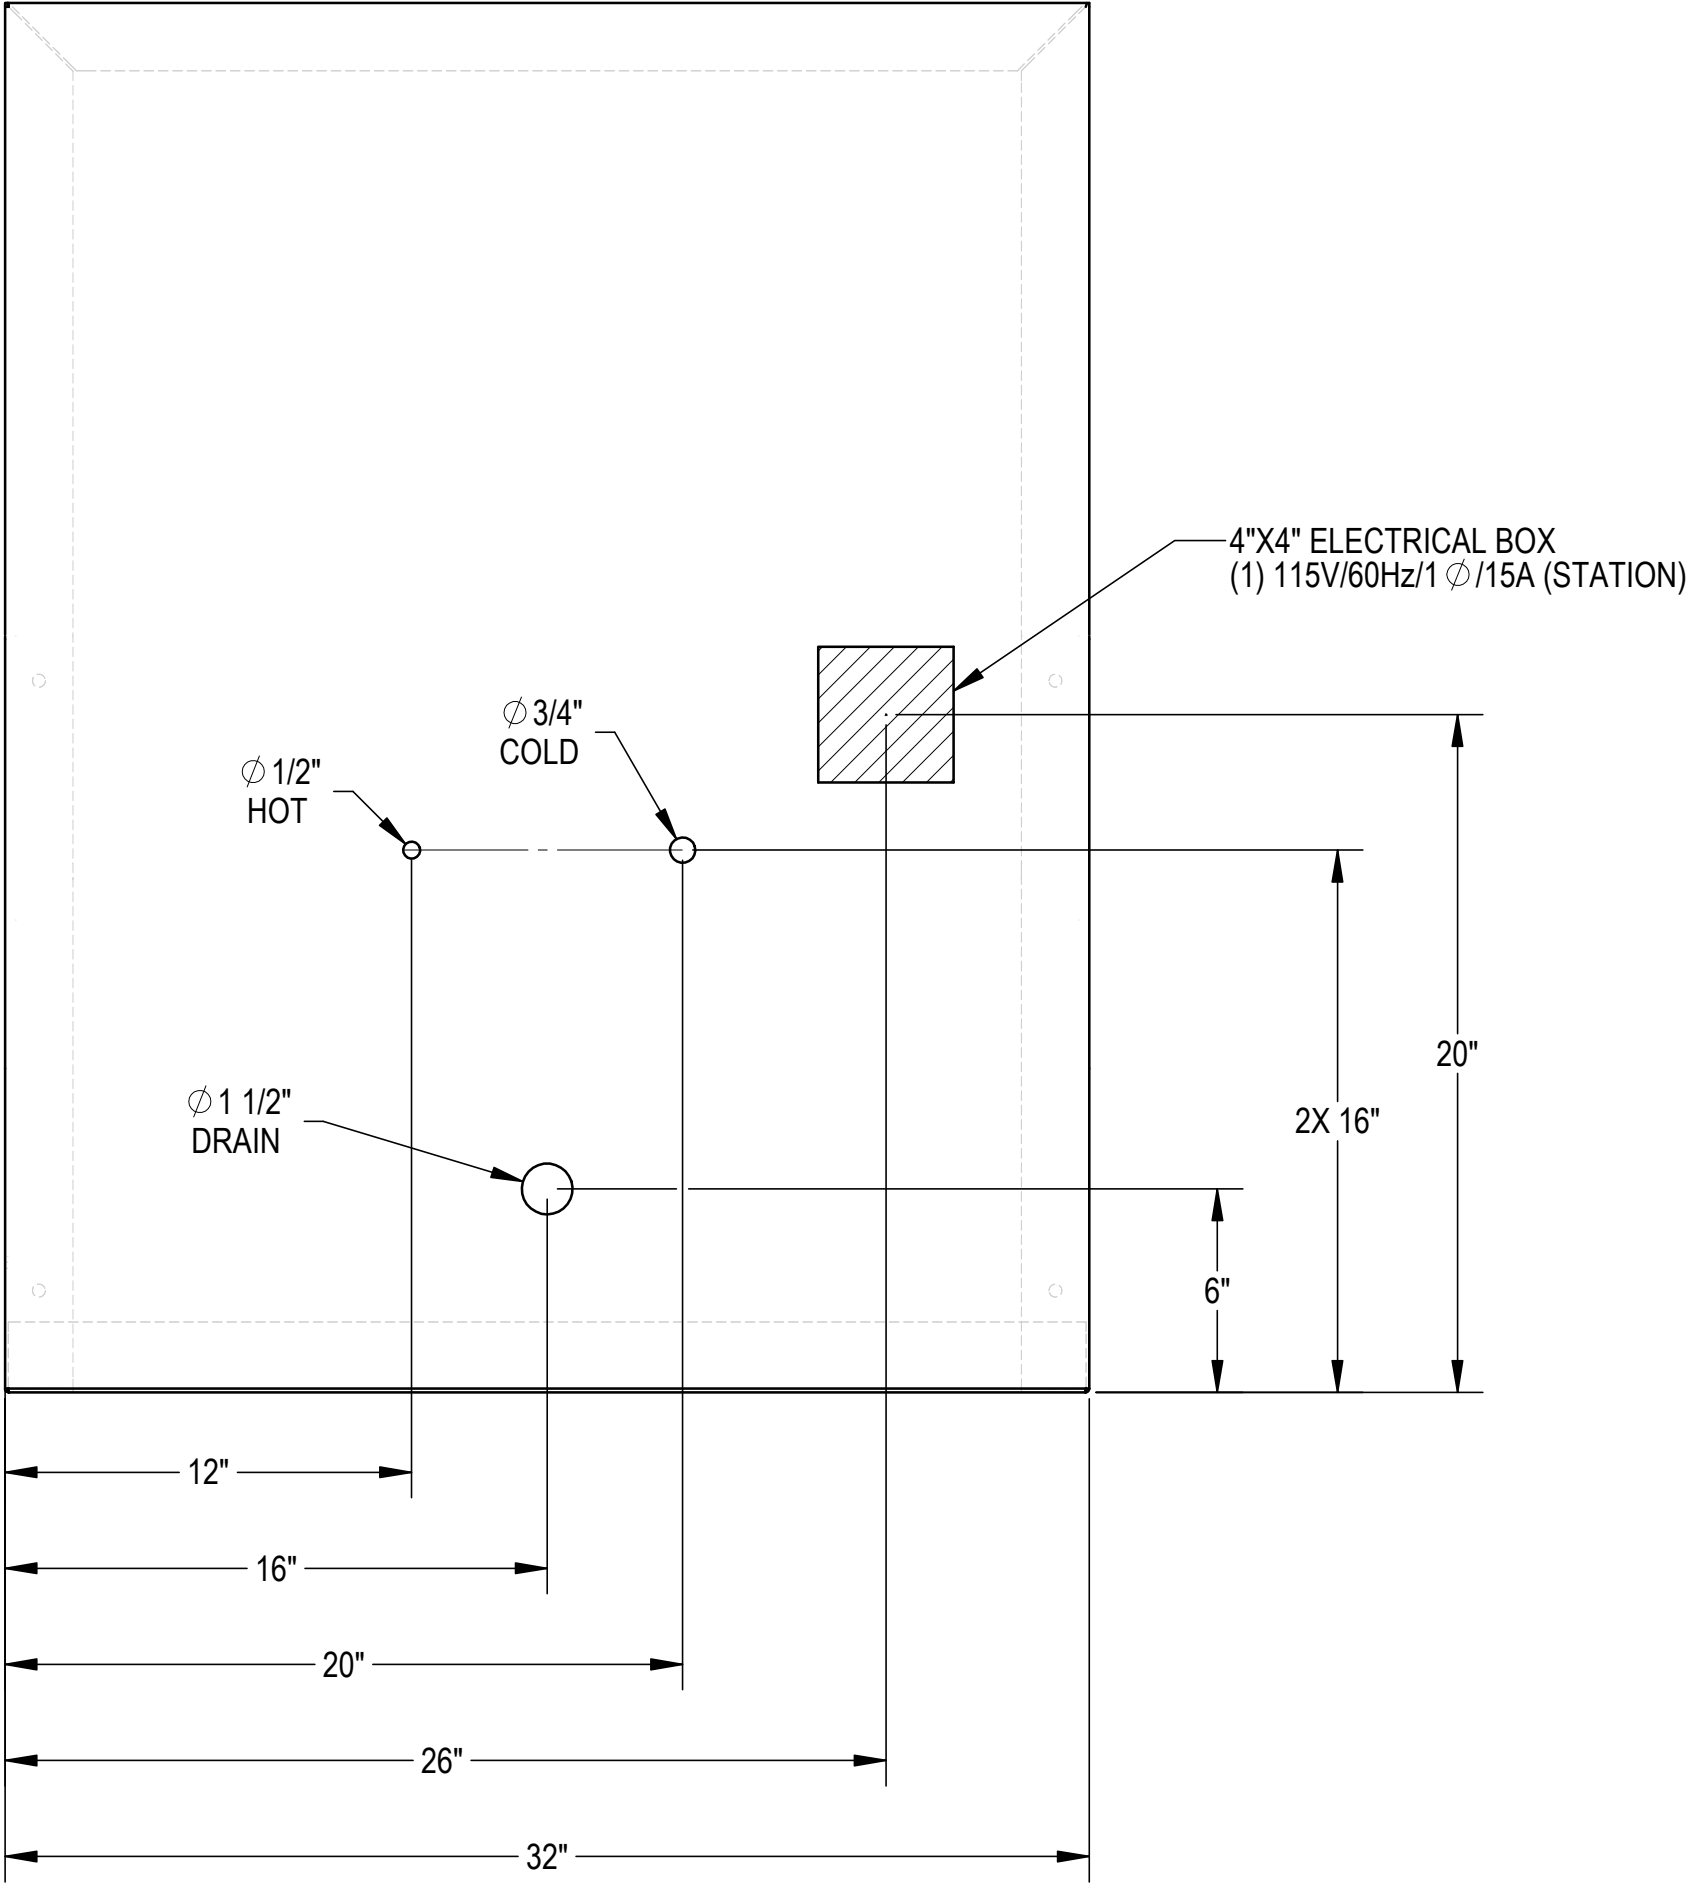

CUSTOMER	APPROVAL		PROPRIETARY THIS DOCUMENT AND THE DATE DISCLOSED HEREIN AND HEREWITH IS NOT TO BE REPRODUCED, USED, OR OTHERWISE DISCLOSED IN WHOLE OR IN PART TO ANYONE WITHOUT WRITTEN AUTHORIZATION FROM MORTECH MFG.			MOPEC GROUP MOPEC MORTECH 411 North Aerojet Avenue Azusa, CA 91702 tel: (800) 410-0100 (626) 334-1471 fax: (626) 334-1704 www.mortechmfg.com	
PROJECT							
	SIGNATURE	DATE	DO NOT SCALE DRAWING	APPROVALS	DATE	TITLE MODEL 1036-9 STAINLESS STEEL EMBALMING STATION ROUGH-IN	
			MATERIAL 304 STAINLESS STEEL	DRAWN BY ELISEO S.	02/25/14	SIZE C	DWG NO. 10369AP
			FINISH #4 SATIN	CHECKED BY		SCALE 1:6	REV X02
				APPROVED BY		NEXT ASSY.	SHEET 2 OF 3

WALL-MOUNTING NOTES:

1. Z-CLIP SHIPPED WITHOUT MOUNTING HOLES FOR ADOPTION TO FIELD CONDITIONS. HOLES TO BE DRILLED BY INSTALLER.



2. INSTALL (3) ANCHORS AT 12 1/2" ON CENTER
FIRST HOLE 1" IN FROM SIDE OF Z-CLIP
Z-CLIP LENGTH: 27"
ADDITIONAL ANCHORS CAN BE ADDED AS NEEDED

3. USE 1/4" TEK SCREWS, 2 3/4" LONG
ADJUST LENGTH PER WALL THICKNESS

4. ANCHORS USED MUST BE FLUSH TO Z-CLIP AS MUCH AS POSSIBLE. THEY MUST NOT INTERFERE WITH PLUMBING BEHIND WALL.

5. THE LOWER ANCHORS ARE USED TO KEEP THE BOTTOM OF THE EMBALMING STATION FROM PULLING AWAY FROM THE WALL.
6. USE MINIMUM OF (2) 1/4" TEK SCREWS PER LOWER FLANGE

7. INSTALLATION IS BASED ON ROUGH-IN MOUNTING DETAIL PROVIDED.
- SUPPORT LOCATION FOR EMBALMING STATION ONLY.
ADDITIONAL WALL SUPPORTS MAY BE REQUIRED.

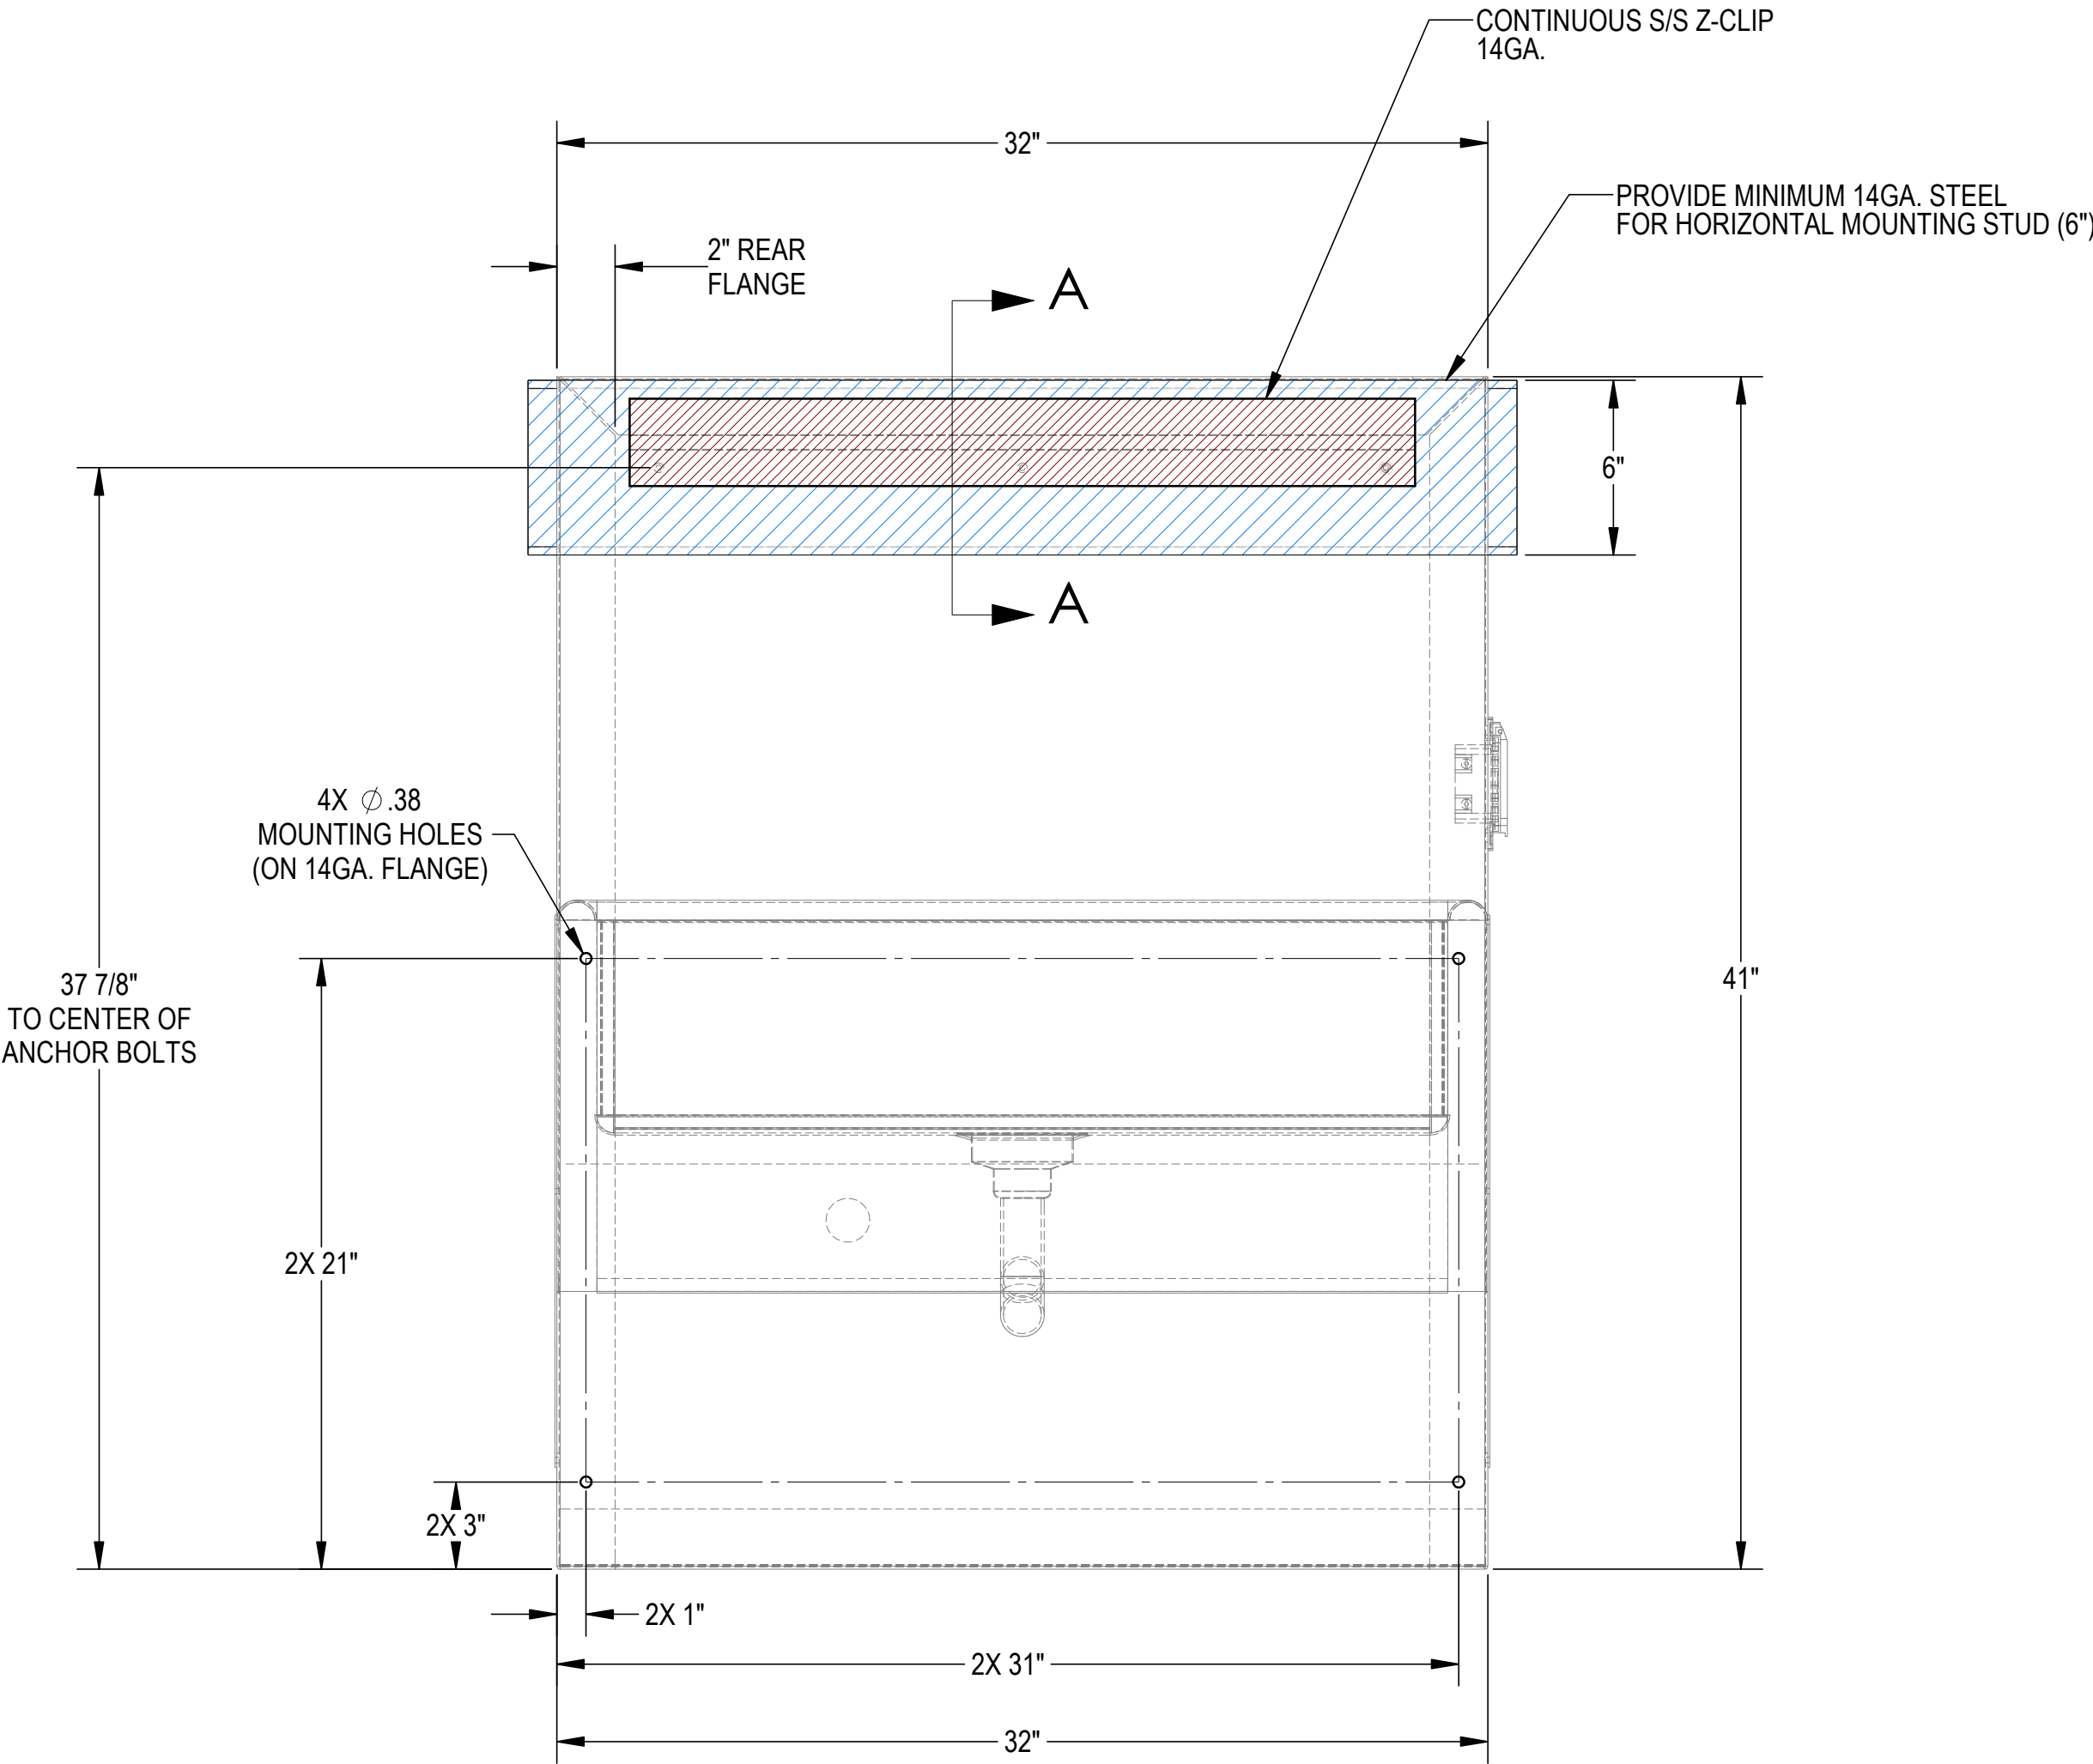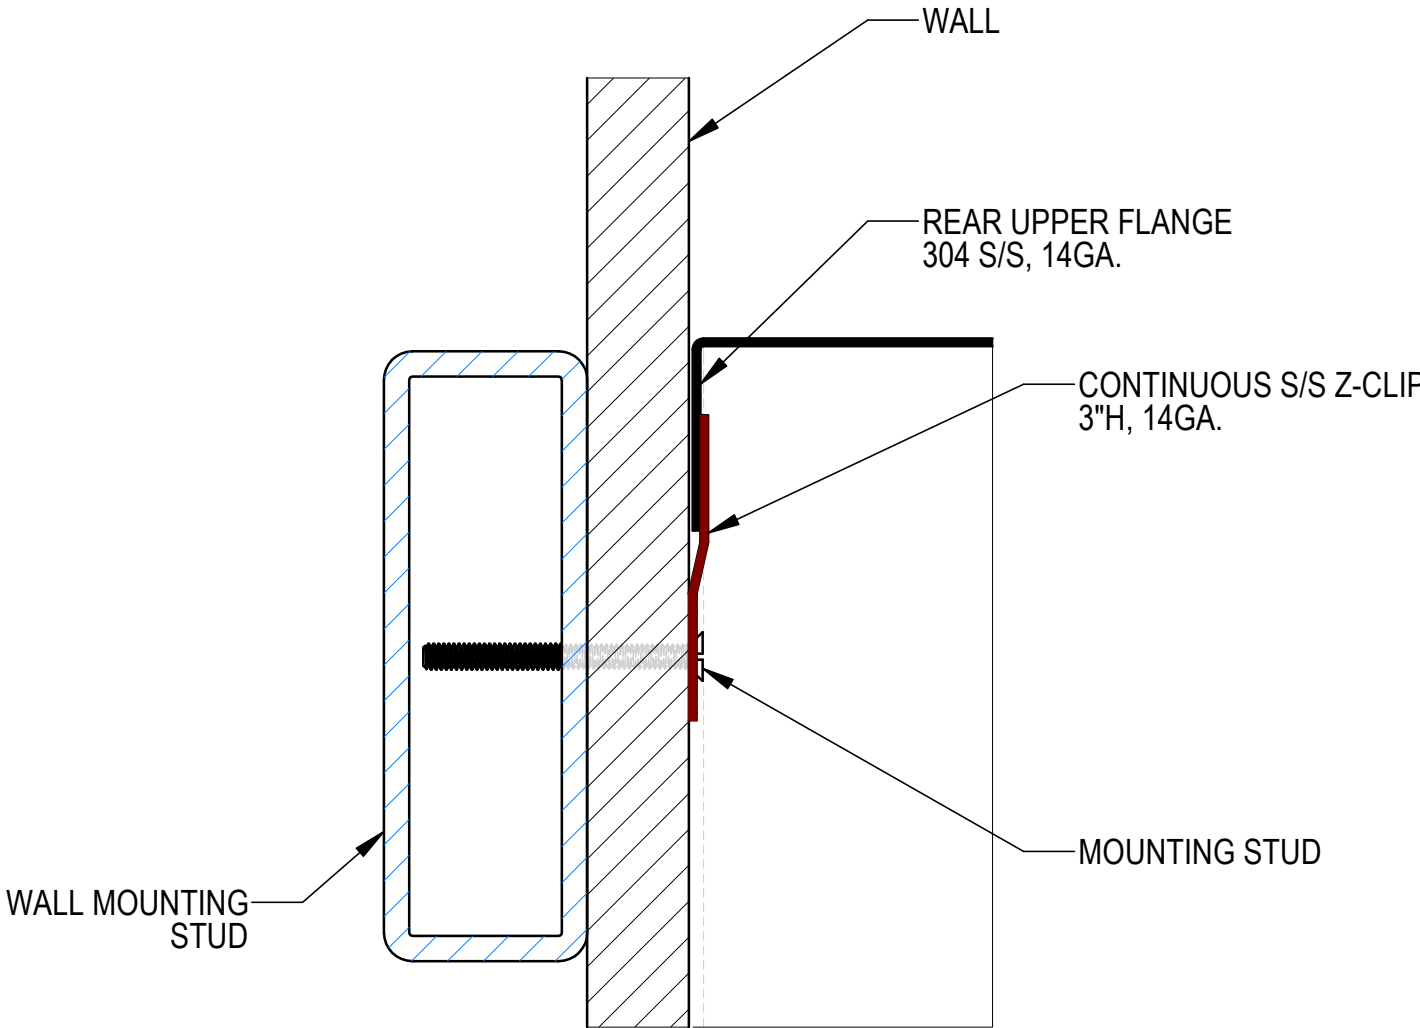

CUSTOMER	APPROVAL		PROPRIETARY			MOPEC GROUP		411 North Aerojet Avenue Azusa, CA 91702 tel: (800) 410-0100 (626) 334-1471 fax: (626) 334-1704 www.mortechmfg.com	
PROJECT	SIGNATURE		DATE		THIS DOCUMENT AND THE DATE DISCLOSED HEREIN AND HEREWITH IS NOT TO BE REPRODUCED, USED, OR OTHERWISE DISCLOSED IN WHOLE OR IN PART TO ANYONE WITHOUT WRITTEN AUTHORIZATION FROM MORTECH MFG.			TITLE	
					DO NOT SCALE DRAWING			MODEL 1036-9	
					MATERIAL 304 STAINLESS STEEL			STAINLESS STEEL EMBALMING STATION	
					FINISH #4 SATIN			WALL-MOUNTING	
					APPROVALS DRAWN BY ELISEO S. CHECKED BY APPROVED BY			10369AP	
					DATE 02/25/14			REV X02	
					SCALE 1:6			NEXT ASSY.	
					SHEET 3 OF 3				